ARAT Telephone mount for

Type: Ford Fusion

Part No: 1329

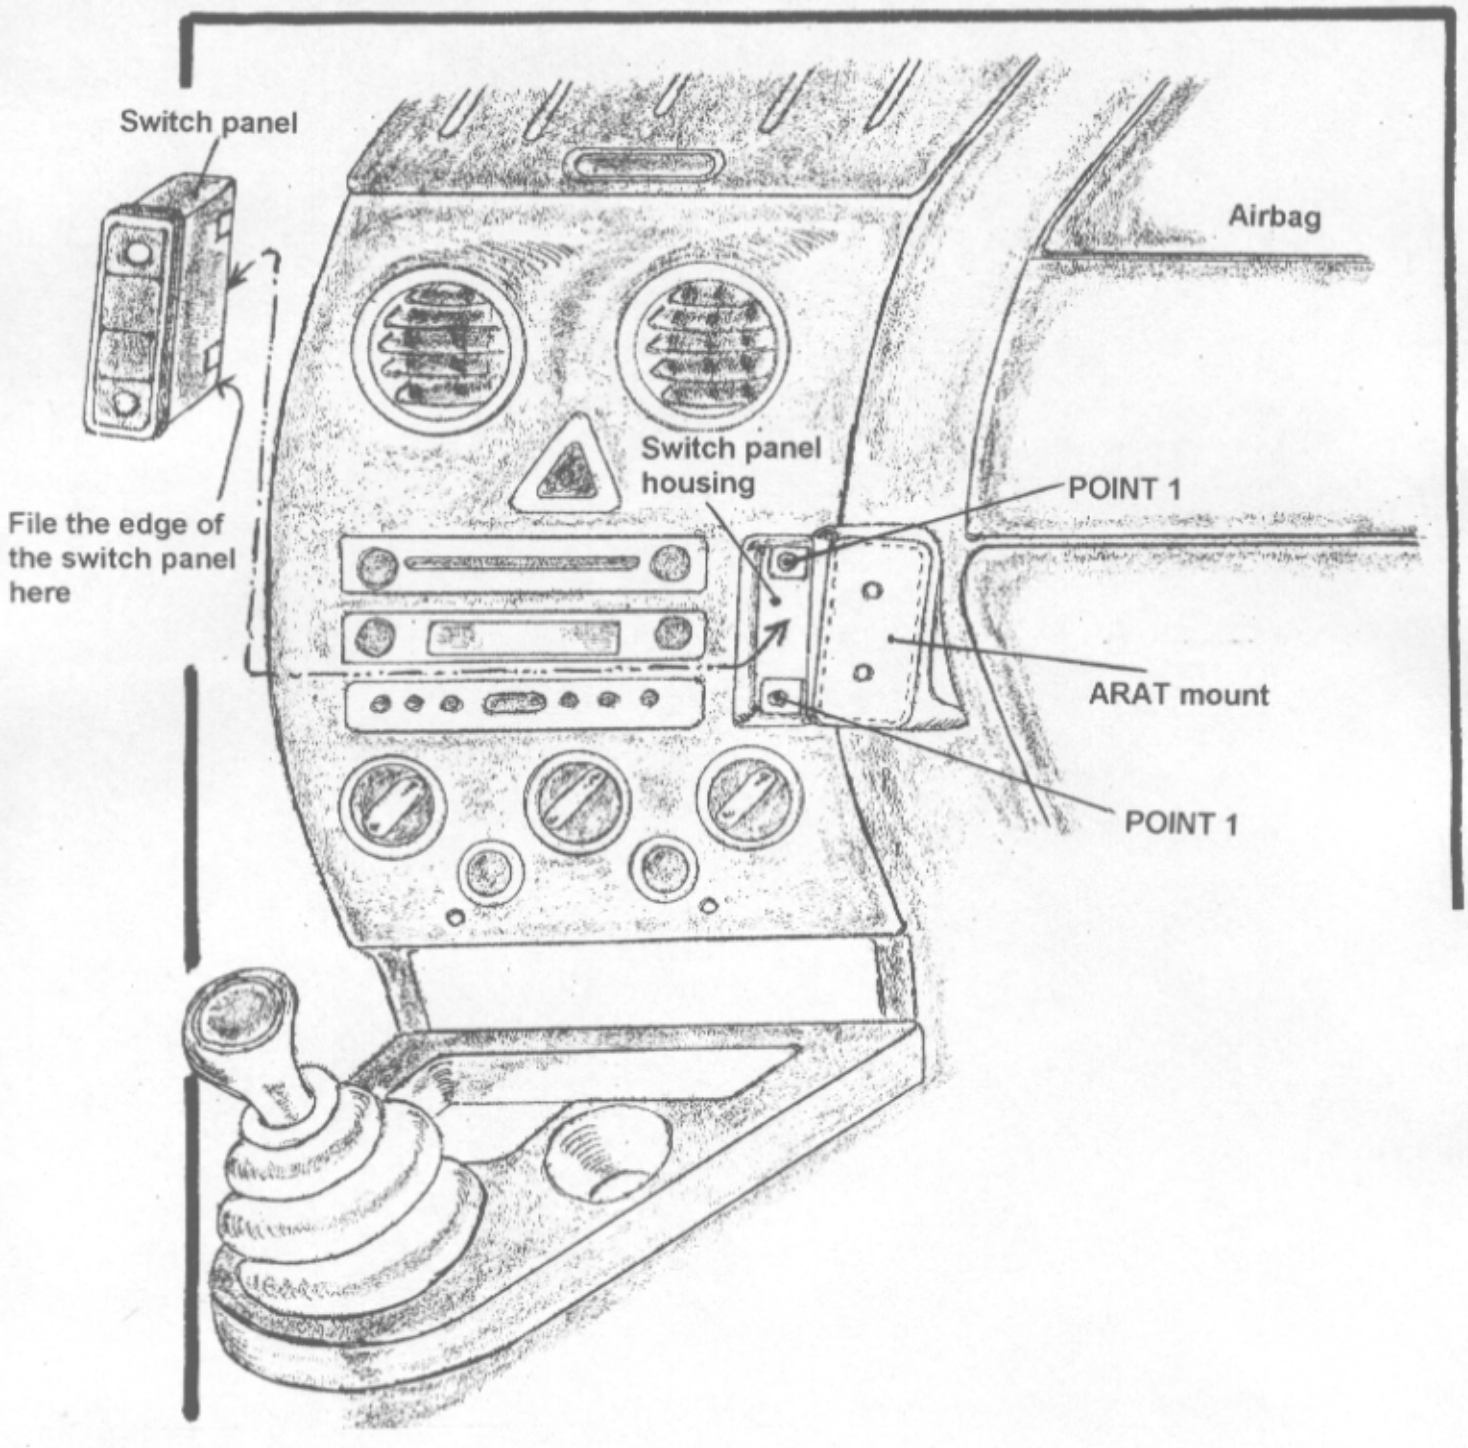

Installation instruction

1. Remove the switch panel from its housing (only a clip fit)
2. Remove the screws at POINTS 1,
3. Place the ARAT mount to the contours of the dashboard and replace the screws through the metal plates of the mount
4. Replace the switch panel (file the rear side edge away, the switch panel will fit better against the metal plates)